



## Instruction for replacing the batteries and fluorescent lamp.

### Batteries Replacement

Remove the battery door by sliding down the battery cover (see Fig.1) and replace the new batteries (4 x 1.5V AA heavy duty / alkaline battery). Make sure the batteries are orientated correctly on the positive & negative terminals.

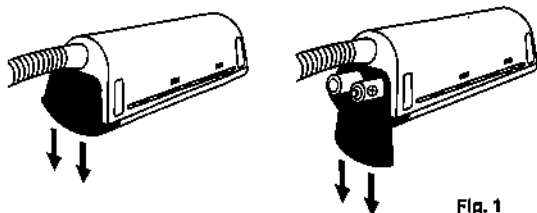


Fig. 1

### Fluorescent Lamp Replacement

Press the black button to open the lamp cover (see Fig.2). Turn the fluorescent lamp by 90 degree for removing the lamp (see Fig.3). To fix the new fluorescent lamp (model: F4T5CW) by turning the lamp 90 degree and snap the lamp contact pin into the contact plate (see Fig.4). Ensure the lamp cover is firmly re-assembled.

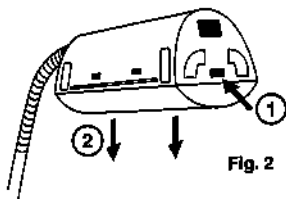


Fig. 2

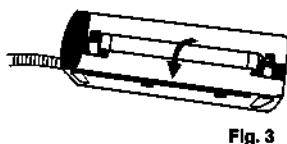


Fig. 3

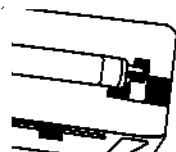


Fig. 4

## Caution

**Do not put the Grill Light on top of fire.**

### Limited ninety day warranty

This Grill Light is warranted by Maverick Industries, Inc., to be free from defects in materials and workmanship for a period of ninety (90) days from date of purchase. In the event of any claim under this limited warranty, Maverick Industries, Inc., will repair or replace at its sole option any unit or part(s) thereof, provided such units or part(s) are sent freight prepaid to the Customer Service Department, Maverick Industries, Inc., Grill Light, 94 Mayfield Avenue, Edison, NJ 08837.

# GRILL FAN MODEL GF-01

## BATTERY REPLACEMENT

Remove the battery cover by unscrewing the knob at the back of the unit (see Fig.1) and replace the new batteries (4 x 1.5V AA heavy duty battery). Make sure the batteries are orientated correctly on the positive & negative terminals.



Fig. 1



Fig. 2

## INSTALLING GRILL FAN

- 1) Do not position the grill fan above fire and/or cooking surface.
- 2) If your grill has a sideburner; you must mount the fan on the side of your grill opposite the sideburner. If your grill does not have a sideburner; you may mount the fan on either side of your grill.

## USE AND CARE

- 1) Store grill fan indoors when not in use.
- 2) The grill fan can be cleaned by gently wiping with a damp cloth. **DO NOT IMMERSE IN WATER.**
- 3) Remove batteries if grill fan is to be unused for two weeks or more as batteries could leak.
- 4) Do not incinerate, compact or disassemble batteries.
- 5) Recycle batteries whenever possible. If recycling is unavailable in your area, dispose of old batteries in accordance with local regulations.

## Caution

**Do not put the Grill Fan on top of fire.  
This is not a toy, keep out of reach of children.**