


INSTRUCTION MANUAL MODEL #TM-10 GRILL MINDER

Introduction

Congratulations on your purchase of the Maverick Grill Minder a timer that tells you how long it has been since you last opened the grill lid as well as the total time your food has been cooking.

Features

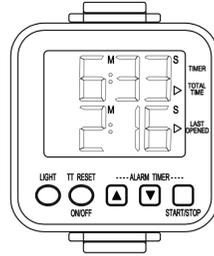

Functions:

(LIGHT): Press to turn light on. Light will stay on for 5 seconds

(TT RESET / ON/OFF): This button controls a variety of features:


- 1) Turns unit ON.
 - 2) Resets both Total Time and Last Opened timer.
 - 3) Calibrates unit when it is initially attached to handle or if it is moved to another location
 - 4) HOLD to turn unit OFF
- (▲)** Increases countdown Alarm Timer by 1 minute
(▼) Decreases countdown Alarm Timer by 1 minute

Press (▲) and (▼) simultaneously to reset alarm timer.

(START/STOP):

Press: Starts and Stops ALARM TIMER.

LCD

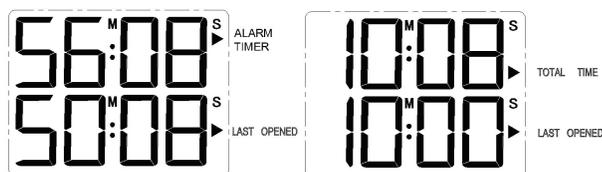

Using the Timer

IMPORTANT: The timer needs to be calibrated once it is attached to the grill handle. Anytime that it is moved to a new position the timer needs to be re-calibrated. **TO CALIBRATE:** Press TT Reset button.

GENERAL FUNCTIONALITY: The timer is designed to accurately time how long it has been since you last checked on your food. It keeps track of time since last opened and total cooking time automatically. User can also set alarm for specific cooking times and use the light feature to see at night.

Placement: The timer is designed to attach to most grill handles using the adjustable black band included. The timer should be attached to the grill handle face up and tight enough so that it does not rotate on the handle. Please note that the rubber backing on the timer is important to keep the timer from rotating. Once the timer is secure, turn on the timer and press the TT Reset button to calibrate the timer to its new position. If the timer is moved, make sure to calibrate it once it is reattached to a new position.

LAST OPENED TIMER: Counts UP automatically when the grill lid is opened. Resets and starts counting up every time the grill lid opens and closes. When you come back to check on your food, the Last Opened time represents how long it has been since the lid was last closed. This timer is always displayed on the lower portion the screen.

TOTAL TIME TIMER: Counts UP automatically when the grill lid is opened. Keeps track of the total cooking time without resetting with every lid movement. Since the timer triggers at first movement (when grill is heating up), it is recommended that the user reset this timer after putting food on the grill for the first time. This will allow for the total cooking time to be completely accurate. Total Time is displayed on the upper part of the screen unless Alarm Timer is running.

ALARM TIMER: Counts DOWN. Basic count down timer that user can set in one minute increments up to 99 minutes. Alarm sounds when timer reaches (00:00). When Alarm Timer is set, it takes over the upper part of the display.

To set the ALARM TIMER press either **(▲)** or **(▼)** to get into ALARM TIMER mode and then use these same arrows to raise or lower the Count Down Timer. Press Start/Stop/Reset to start the count down timer.

HELPFUL HINTS

Unit will turn off automatically after Total Time reaches 60 Minutes

If Alarm Timer is running, it will take over the upper timer. The Total Time will still be kept and will be displayed intermittently (every 30 seconds) for a brief period of 5 seconds. Once the Alarm Timer ends, the Total Time will again take over the upper display.

WEATHER RESISTANT: Timer is designed to be left on the grill handle outdoors and able to withstand regular temperate weather patterns. It is not designed for extreme conditions, including temperatures below freezing, extreme heat, or extremely wet conditions.

Battery Replacement

Remove the rubber backing and use small screw driver to remove the battery cover. Replace battery with CR2032 lithium battery

Cleaning

You can clean the Grill Minder with a soft warm damp sponge or towel.

LIMITED NINETY DAY WARRANTY

Maverick Industries Inc. warrants the Grill Minder to be free of defects in parts, materials and workmanship for a period of 90 days, from date of purchase. Should any repairs or servicing under this warranty be required, contact Maverick Customer Service by mail or phone for instructions on how to pack and ship the Grill Minder to Maverick's National Service Center located as follows:

Maverick Customer Service

94 Mayfield Ave.
Edison NJ 08837

www.maverickhousewares.com

Telephone: (732) 417-9666

Hours: Weekdays 8:30 AM- 4:30 PM

Do not send any parts or product to Maverick without calling and obtaining a Return Authorization Number and instructions.

This warranty is VOID if instructions for use are not followed; for accidental damage; for commercial use; for damage incurred while in transit; or if the Grill Minder has been tampered with.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.